

HARMONY by Legacy Window Coverings

Programming Harmony Roller Shade Motorization

Things to know:

1. BATTERIES ARE NOT INCLUDED!!!
2. EACH SHADE REQUIRES 8AA BATTERIES
3. THE 5 CHANNEL REMOTE REQUIRES A 12 VOLT 27 AMP BATTERY (THIS CAN BE PURCHASED ONLINE, SPECIALTY BATTERY STORES OR SELECT BIG BOX STORES).
4. ALL SHADES COME PROGRAMMED FROM THE FACTORY! PLEASE TELL US WHICH CHANNEL YOU WANT THE SHADES PROGRAMMED TO (5 CHANNEL AND AN ALL). EACH CHANNEL WILL HANDLE UP TO 10 SHADES.

Roller Shade Motorization Programming

Step 1: PAIR REMOTE CHANNEL WITH SHADE

1. Choose the channel on the remote that you would like to pair the shade with
2. Press the RESET BUTTON on the roller tube until the motor "beeps"
3. Press the P2 BUTTON NEXT TO THE BATTERY twice. (The motor will beep each time)
4. Press the DOWN BUTTON ON THE FRONT OF THE REMOTE. (The motor will beep 5 times)
5. The shade is programmed.

Step 2: SET THE UP AND DOWN LIMITS ON THE SHADE

1. Make sure you are on the channel that the remote and shade are paired to
2. Press the P2 BUTTON until – the motor beeps and jogs
3. Press the UP BUTTON ON THE FRONT OF THE REMOTE – the motor will beep
4. Press the P2 BUTTON – the motor will beep twice and jog
5. Press the UP BUTTON ON THE FRONT OF THE REMOTE - the shade will move up towards the up limit
6. Press the STOP BUTTON ON THE FRONT OF THE REMOTE – the shade will stop
7. Press the STOP BUTTON ON THE FRONT OF THE REMOTE 5 times – the shade will beep each time and will jog when the up limit is set
8. Press the DOWN BUTTON ON THE FRONT OF THE REMOTE – the shade will move down towards the down limit
9. Press the STOP BUTTON ON THE FRONT OF THE REMOTE – the shade will stop
10. Press the STOP BUTTON ON THE FRONT OF THE REMOTE 5 times – the shade will beep each time and jog when the down limit is set
11. Your shades up and down limits are set!

