



2015 15 Channel Portable Remote Programming:

For the (25DE with AC Adaptor) motor & the (25CE Battery Wand) motor

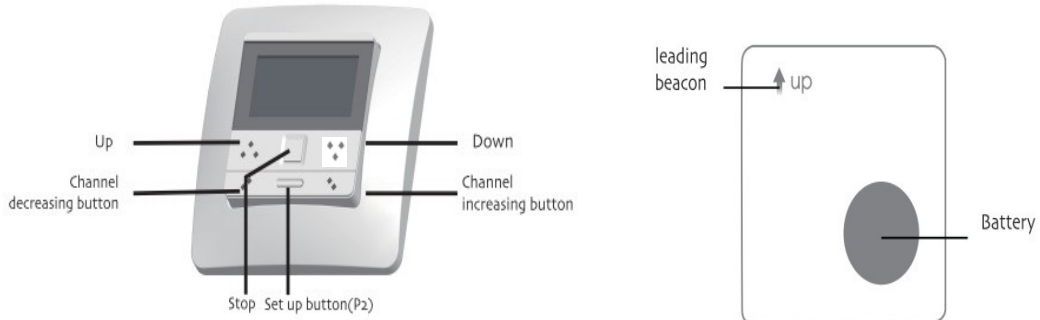

<<<<< 2015 Motor <<<<<< The Motor head has one recessed Reset hole only:

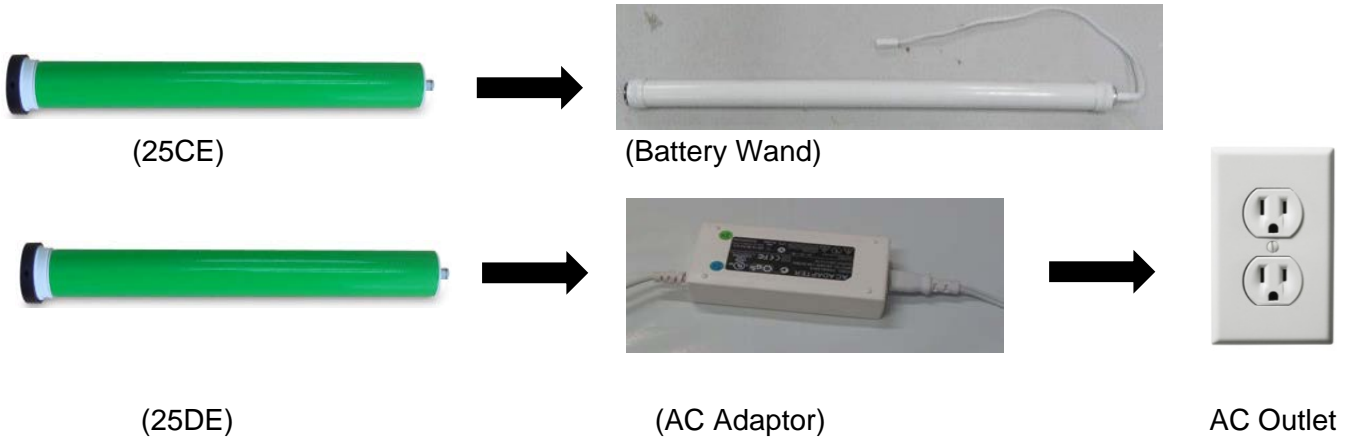

Roller Shade Motorization Programming:

Step 1: PAIR REMOTE CHANNEL WITH THE SHADE:

Plug in / long beep
P2 / beep / jog
P2 / beep / jog
Press Down
Shade goes down
Press Stop

1. Choose the channel on the remote that you would like to pair the shade with.
2. Power Up / Connect the Motor. The Shade will sound one long beep.
3. Press the P2 BUTTON once. (The motor will Jog.)
4. Press the P2 BUTTON once. (The motor will Beep.)
5. Press the DOWN BUTTON. (The Shade goes Down.)
6. Press Stop.
7. The shade is paired with the Remote.

Step 2: SETTING THE UP AND DOWN LIMITS:

Press P2 / Beep / Jog
Press UP / Beep
Press P2 / Beep / Jog
Press UP / Shade moves up.
Press STOP / 5 Times / Jog

Press DOWN / Shade moves
down.
Press STOP / 5 Times / Jog
Limits are set

1. Press the P2 BUTTON and the Shade will Beep and Jog.
2. Press the UP BUTTON and the shade will Beep.
3. Press the P2 BUTTON and the Shade will Beep and Jog.
4. Press the UP BUTTON and the Shade will go UP.
5. When the Shade reaches the position you want as the UP LIMIT, Press the STOP BUTTON 5 times. The shade will Beep each time the Stop Button is pressed and then Jog after the 5th press. The UP LIMIT is set.
6. Press the DOWN BUTTON and the Shade will go Down and beep several times.
7. When the Shade reaches the position you want as the DOWN LIMIT, Press the STOP BUTTON 5 times. The shade will Beep each time the Stop Button is pressed and then Jog after the 5th press. The DOWN LIMIT is set.

SETTING THE MIDDLE LIMIT:

Press Up / Shade moves UP
Press STOP / at middle limit
Press STOP / every 1½ secs.
until the Shade Jogs.
The Middle limit is now set.

1. Press the UP BUTTON. The Shade goes UP.
2. Press Stop at the position you want the Middle Limit.
3. Every 1 ½ seconds press Stop until the Shade Jogs once.
4. The middle limit is now set.
5. Move the Shade to its UP or Down Limit and let it stop.
6. The Shade can be returned to the Middle Limit by pressing STOP until the shade starts to move to the middle. Release the Stop button. The Shade will stop at the Middle Limit.

REVERSING THE SHADE DIRECTION:

1. Press and Hold the Reset Button at the end of the tube until the Shade Jogs once. The direction is now reversed. Use the Up or Down key to verify the direction.

FACTORY RESET: THIS WILL ERASE ALL LIMIT AND REMOTE CHANNEL SETTINGS.

P2 / Jog
STOP / Beep
P2 / Jog
Go to Step 1:

1. Press the P2 Button once, the Shade will Jog.
2. Press the Stop Button once, the Shade will Beep.
3. Press the P2 Button once, the Shade will Jog.
4. Start over with Step 1.

HOW TO ENTER OR EXIT DOT MODE:

To Enter Dot Mode:

- | | | |
|------------|-----------------|--------------------------|
| P2 / Jog | 1. Press P2 – | The shade will Jog once. |
| UP / Jog | 2. Press UP – | The shade will Jog once. |
| DOWN / Jog | 3. Press DOWN – | The shade will Jog once. |

To Exit Dot Mode:

- | | |
|-----------------|--------------------------|
| 1. Press P2 – | The shade will Jog once. |
| 2. Press UP – | The shade will Jog once. |
| 3. Press DOWN – | The shade will Jog once. |

The Up, Down and Middle Limits will not be lost Entering or Existing Dot Mode

HOW TO COPY THE PROGRAMMING FROM ONE CHANNEL TO ANOTHER CHANNEL ON THE SAME REMOTE:

- | | |
|----------------|---|
| P2 / Jog | 1. Switch the Remote to the channel to be copied. |
| P2 / Jog | 2. Press the UPPER LEFT P2 BUTTON ON THE BACK OF THE REMOTE ONCE / the shade will jog once. |
| Switch Channel | 3. Press the UPPER LEFT P2 BUTTON ON THE BACK OF THE REMOTE ONCE / the shade will jog once. |
| P2 / Jog | 4. Switch the Remote to the channel you want to copy programming to. |
| | 5. Press the UPPER LEFT P2 BUTTON ON THE BACK OF THE REMOTE ONCE / the shade will jog once |
| | 6. The programming is now copied to the new channel. |

SPECIAL STEP: TO COPY ONE REMOTE (A) TO A SECOND REMOTE (B):

This step must be repeated for each channel you want to copy from Remote A to Remote B

- | | |
|-------------------|---|
| P2 A Remote / Jog | 1. Press the UPPER LEFT P2 BUTTON ON THE BACK OF THE REMOTE (A) – the shade will jog once. |
| P2 A Remote / Jog | 2. Press the UPPER LEFT P2 BUTTON ON THE BACK OF THE REMOTE (A) – the shade will jog once. |
| P2 B Remote / Jog | 3. Press the UPPER LEFT P2 BUTTON ON THE BACK OF THE REMOTE (B) – the shade will jog once. |
| | 4. The programming from remote (A) is now copied to remote (B) |
| | 5. This Step also copies the ALL BUTTON from Remote A to Remote B. |
| | 6. Do not Copy Remotes if you DO NOT want the ALL BUTTON (0) on both remotes to move all shades. |

SPECIAL NOTE: SHADES CAN BE CONTROLLED BY MULTIPLE REMOTES:

UNLOCKING THE 15 CHANNEL REMOTE:

In rare cases you may receive a 15 Channel remote that will not display all 15 channels. If you receive one of these Locked Remotes, use the directions below to “Unlock the Remote” and restore all 15 channels.


Press and Hold the Left arrow key (P1+) and the Right arrow key (P1-) at the same time until a C appears in the display screen



Continue to press the Left and Right arrow keys until the display changes to 15. Release the Left and Right arrow keys



Press the Stop button once and a zero will appear in the display and then change to 15. The remote is now unlocked and you may proceed with programming.

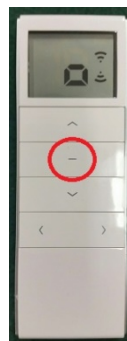

V

