


Installation Instructions Honeycomb Shades Special Shapes


Perfect Arch

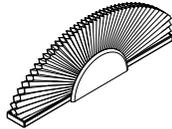


Elongated Eyebrow




Eyebrow

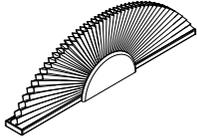


Triangle

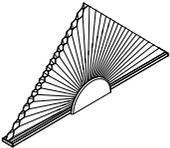


Quarter Round L / R

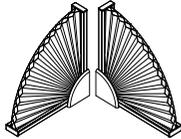


Arch on Top L / R

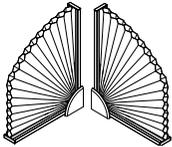


Half Eyebrow L/R

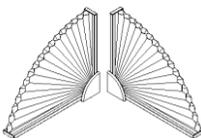

Angle Top L/R

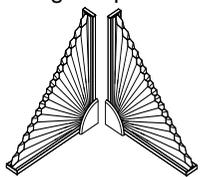

Check Component/Hardware:



for 3/4" S&1/2" D for 9/16" S for 3/8" S
Installation Bracket



Bracket Clip

180° Center Template

90° Center Template



90° Center Support



180° Center Support

Hardware Standard Quantity

For perfect arch, Eyebrow, Elongated Eyebrow, and Triangle:

Order Width (X)	X ≤ 48"	X > 48"
Installation Bracket	2	4
Bracket Clip (for perfect arch, Eyebrow, Elongated Eyebrow)	4	6
Bracket Clip (Triangle)	6	8
1 1/4" Screw for Installation Bracket	Installation bracket qty x 2	
3/4" Screw for Bracket Clip	Bracket Clip qty	

For Quarter Round, Half Eyebrow, Arch on Top, and Angle Top:

Order Width (X)	X ≤ 24"	X > 24"
Installation Bracket	2	4
Bracket Clip (Quarter Round, Half Eyebrow, Arch on Top)	2	4
Bracket Clip (Angle Top)	4	6
1 1/4" Screw for Installation Bracket	Installation bracket qty x 2	
3/4" Screw for Bracket Clip	Bracket Clip qty	

Step 1: Getting Started

Remove the shade from the package. Save the packaging until the shade is installed and working to your satisfaction.

Tools Needed:

- Power drill and drill bit
- Measuring tape
- Screwdriver
- Level
- Pencil




You will need to use the following fasteners for your particular mounting surface.


Surface	Fastener
Wood	#8x1 1/4" Screws (Provide)
	#6x3/4" Screws (Provide)
Drywall/Plaster	Wall Anchors, Expansion Bolts (Not Provide)
Metal	Sheet Metal Screws (Not Provide)

Step 2: Assemble the Shade

For Perfect Arch, Eyebrow, Elongated Eyebrow, and Triangle (take Perfect Arch as example):
Open the shade and place the rail into the bottom of 180° center support tightly, and then install the front and back 180° center templates:

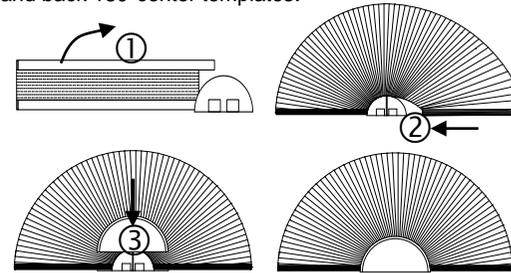

For Quarter Round, Arch on Top, Angle Top, and Half Eyebrow (take Quarter Round as example):
Open the shade and place the rail into the bottom of 90° center support tightly, and then install the front and back 90° center templates:

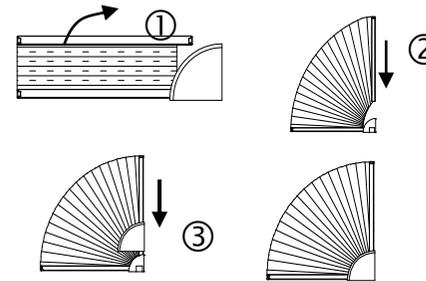


Step 3: Install the Bracket


Mark the bracket location on the mounting surface as shown in the following illustrations.

For Perfect Arch, Eyebrow, Elongated Eyebrow, and Triangle (take Perfect Arch as example):

For shade width X ≤ 48", measure 1.5" (38mm) from both ends of the rail to locate the center of the bracket

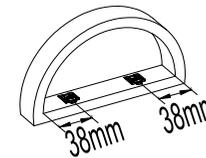


For shade width X > 48", place the bracket evenly along the rail

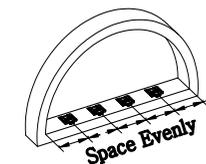



For Quarter Round, Arch on Top, Angle Top, and Half Eyebrow (take Quarter Round as example):

For shade width X ≤ 24", measure 1.5" (38mm) from both ends of the rail to locate the center of the bracket

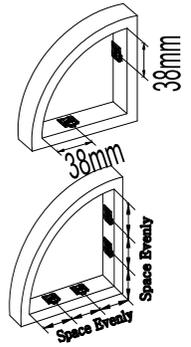

For shade width X > 24", place the bracket evenly along the rail

Use two #8x1 1/4" screws to attach the installation brackets on the window frame. The min. distance is 11/16" from the front bracket to the edge of window frame.

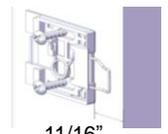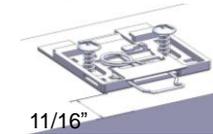

Step 4: Install the Shade

1. Install the Bracket Clip

Insert the Bracket Clip into fabric and then close the Bracket Clip to keep it clamped on the fabric. Double Cell:



Step1




Step2

Single Cell:




Step1

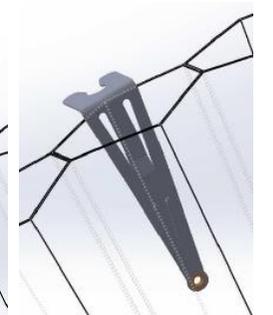

Step2



Bracket Clip open and close illustration:

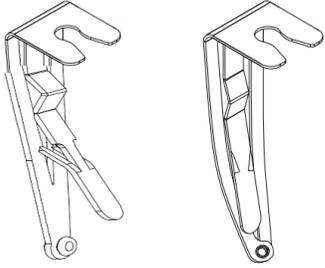

Open

Close

2. Put the shade inside the window opening.

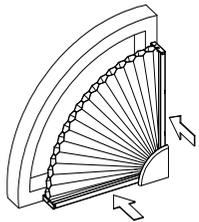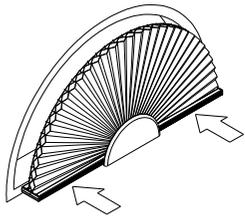

3. Install the Screws for Bracket Clip

Mark the bracket clip location on the mounting surface as shown in the following pictures.

Perfect Arch & Eyebrow

Shade width $X \leq 48"$

Shade width $X > 48"$





Space Evenly

Space Evenly

Elongated Eyebrow

Shade width $X \leq 48"$

Shade width $X > 48"$

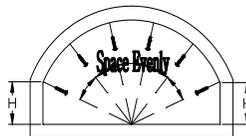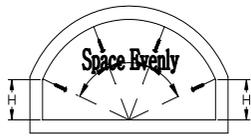

Space Evenly

Space Evenly

⚠ Please pull up the high point of leg (H) to make leg stand before install the Bracket clip screw. The Bracket clip screw should be installed on the curve, not on the leg (H).


Triangle

Shade width $X \leq 48"$

Shade width $X > 48"$



Space Evenly

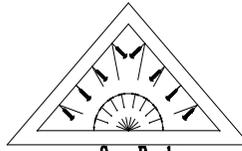


Space Evenly


Quarter Round & Half Eyebrow

Shade width $X \leq 24"$

Shade width $X > 24"$

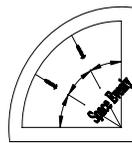

Space Evenly

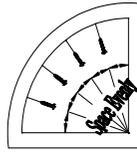


Space Evenly


Arch on Top

Shade width $X \leq 24"$

Shade width $X > 24"$

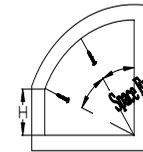

Space Evenly

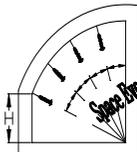


Space Evenly

⚠ Please pull up the high point of leg (H) to make leg stand before install the Bracket clip screw. The Bracket clip screw should be installed on the curve, not on the leg (H).


Angle Top

Shade width $X \leq 24"$

Shade width $X > 24"$

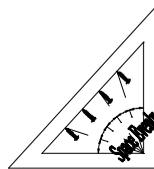

Space Evenly

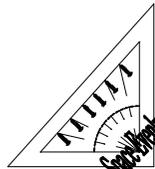

Space Evenly


Triangle

Shade width $X \leq 48"$

Shade width $X > 48"$




Space Evenly

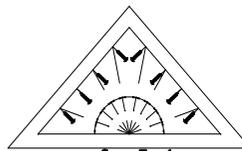


Space Evenly

Install a #6x3/4" screw into the corresponding location of the bracket clip about 1 1/8" distance from the front window frame (do not drive the screw completely in and leave around 2mm gap to insert Bracket Clip)

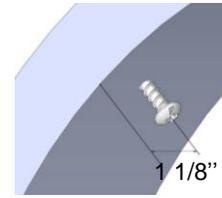


4. Install the rail

Place the front groove of the rail into the front iron wire of the bracket and then push forward to make the back groove of the rail snap into the back groove of the bracket.

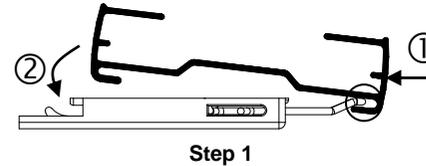

Step 1

5. Insert the Bracket Clip into the screw from the notch.

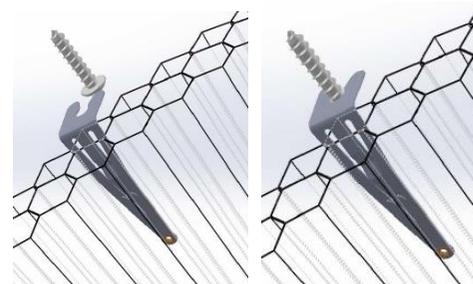


Step1

Step2

Remove the Shade

1. Take off the Bracket Clip from the screw.
2. Backward the rail from the front and then force the rail up from the back.

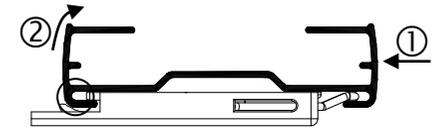

Cleaning

Routine cleaning will help maintain the beauty of your shade. The shade can be cleaned by using a soft brush, vacuumed with a low suction hand-held vacuum, cleaned ultrasonically (specify that a mild solution must be used and that the head rail should never be immersed in liquid), or dampen a clean cloth with a warm water and mild detergent solution to dab the spot until it's gone (do not rub!).